Congratulations on the purchase of your new Satiny Smooth™ Total Body Epilator. For maximum information about the advantages of this appliance and tips for successful depilation (scrubbing and hair removal from every part of your body), please take a minute to read the following operating and care instructions. Thank you for choosing Conair, the #1 brand in Personal Care Appliances.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING

FOR HOUSEHOLD USE ONLY

KEEP AWAY FROM WATER

DANGER – Any appliance is electrically live, even when the switch is off.
To reduce the risk of death or injury by electric shock:

1. If you are using the appliance in a bathroom, unplug it after you have finished using it. Using the appliance close to a source of water can, in fact, be dangerous, even if the unit is switched off.
2. Never immerse the appliance in water or any other liquid.
3. Do not use while bathing or in the shower.
4. Do not place or store appliance where it can fall or be pulled into a tub or sink.
5. Always unplug the appliance after each use and before cleaning it.

WARNING – To reduce the risk of burns, fire, electric shock, or injury to persons:

1. This appliance should not be used by, on, or near children or individuals with certain disabilities.
2. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
3. Use only the adapter provided to operate or charge the unit.
4. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged. Return the appliance to a service center for examination and repair.**
5. Keep cord away from heated surfaces.
6. Never drop or insert any object into any opening.
7. Do not use if unit has fallen in water.
8. Do not leave the appliance unattended when it is plugged in or switched on.
9. Do not leave the appliance plugged into the outlet for longer than 24 hours.
10. Unplug the appliance immediately if you have problems when using it.
11. To prevent damage to the cord, do not wrap it around the appliance. Ensure that it is stored without twisting and folding the cord.
12. Always attach plug to appliance first, then to outlet. To disconnect, turn all controls to OFF position before removing plug from outlet.

Voltage: This appliance comes with an adapter that can be used on an alternating current (100-240V AC).

USER MANUAL

Before using the Class 2 power supply, read these instructions carefully.

Model: E2
Rated input voltage: 100-240V, 50/60Hz, 0.2 Amax
Rated output: 3.6VDC, 1000mA

OPERATION

1. For dry location use only. Do not expose to water.
2. When not in use or charging, unplug unit completely.
3. Unit will become warm during use.

CAUTION

1. Dry location use only. Do not expose to liquid, vapor or rain.
2. Do not short the polarity (output cord). Ensure jack is plugged into the epilator unit before plugging the adapter into the outlet.
3. Do not operate any appliance that has a damaged output cord or housing.
4. Always unplug the unit before cleaning or when not in use or charging.
5. Be sure voltage is correct before plugging in.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modification to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

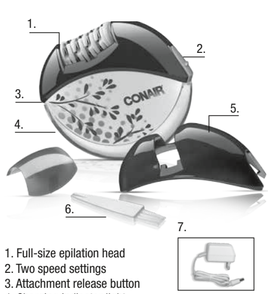

1. Full-size epilation head
2. Two speed settings
3. Attachment release button
4. Charging indicator light
5. Sensitive area attachment
6. Cleaning brush
7. Charging adapter

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

HOW TO CHARGE

1. Before using the epilator for the first time, charge continuously for 16 hours. Maximum battery capacity will be reached only after three charging and discharging cycles. Always make sure that the on/off switch is in the OFF position.
2. Plug the adapter into a 100–240V AC outlet.
3. Plug the cord into the unit.
4. The charging indicator light should go on, indicating that the unit is being charged.
5. Preserving the batteries: in order to maintain the optimum capacity of the rechargeable batteries, the epilator should be recharged for 16 hours approximately every three months.

WARNING

1. Women whose skin is sensitive to cosmetics or easily irritated by shaving, or who suffer from a skin allergy, should test one section of the leg or arm before using the epilator.
2. **The epilation head is a precisely finished piece. Do not press hard against the epilation head. A warped or distorted epilation head will produce poor depilation results. Also a damaged epilation head may cause skin injury. A damaged epilation head should be replaced immediately.**
3. When cleaning, use cold or warm water. Do not use hot water, seawater, or cleaners, as they can cause damage to the waterproof seals.
4. Do not leave the entire unit submerged in water for a long period of time.
5. To prevent damage to the epilation head, women who use underarm deodorant must thoroughly clean and air-dry the epilation head after use. Failure to do this may result in corrosion.
6. Keep out of reach of children.

The Satiny Smooth™ by Conair Total Body Epilator gives you complete epilation for long-lasting results. It has two interchangeable attachments that are specially designed to work quickly and leave you perfectly groomed all over.

USING THE EPILATOR

If you are new to epilation or have not used an epilator in a long time, it may take a short while for your skin to adapt to epilation. Initial discomfort felt will decrease over time. While using the Satiny Smooth™ Total Body Epilator, you may find that quantity and density of hair growth lessen.

The Satiny Smooth™ Total Body Epilator is designed for efficient and comfortable removal of unwanted hair. The ergonomic design is specially designed for precise epilation of all parts of the body, even the least accessible. Our ultra-precision tweezers capture even the finest hair (optimal length 0.5 cm). The hair that grows back should be both thinner and softer. Epilating will leave your skin satiny smooth for several weeks.

EPILATION

NOTE: Using an epilator may cause reddening or irritation of the skin. This is a normal reaction that will disappear shortly. If the irritation does not disappear within a few days, you should consult your doctor.

1. Be sure the unit is fully charged or corded. This epilator is for corded/cordless usage.
2. **Make sure your skin is clean, dry, and free of any creams, greases or oils.**
3. Choose your desired speed: Low speed for sensitive areas and high speed for your legs and arms.
4. With your free hand, hold the skin tight to ensure that the hairs stand up straight.
5. Place the Satiny Smooth™ Total Body Epilator flat against the skin, with the epilation head forming a 90° angle to the skin.
6. **With a slow continuous movement, pass the unit in the direction of hair growth across the skin.** If results are not optimal passing the unit in the direction of the hair growth, small circular movements along the skin will also produce desired results.
7. Repeat process over desired areas until unwanted hair is removed.
8. Once complete, turn off the epilator and remove the adapter if corded.

SENSITIVE AREA ATTACHMENT

For hair removal on your most sensitive areas, remove the full-size epilation attachment and replace it with the sensitive-area attachment as follows.

1. Ensure that the Satiny Smooth™ Total Body Epilator is turned off.
2. Press the epilation attachment release button located on the side of the unit (A).
3. Remove the full-size epilation attachment (B).
4. Position the sensitive-area attachment in the correct location covering the top of the unit.
5. Press gently until the attachment clicks into position.

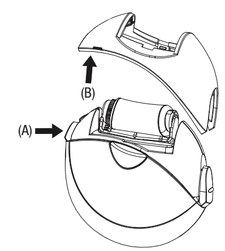

LEG/FULL ARM EPILATION

1. Using the full-size epilation attachment, begin epilation at the lower leg/arm and move upward.
2. For optimal results behind the knee/elbow, keep the leg/arm out straight, so that the skin is taut.

UNDERARM/BIKINI AREA EPILATION

NOTE: The underarm and bikini area are especially sensitive to epilation. Sensitivity reduces over time.

1. For optimum results, attach the sensitive-area attachment and have the hair at 0.5 cm in length.
2. To ensure comfort, set the unit to the low speed.
3. Hold the skin stretched. For your underarm, raising the arm can create stretched skin. To remove hair, move the epilator in an upward motion and then a downward motion.
4. To remove hair from your bikini line, carefully stretch your skin and move the epilator from the outside in.

Le félicitamos por haber comprado la depiladora corporal Satiny Smooth™. Para disfrutar plenamente de este aparato y siempre obtener resultados óptimos, tómese unos minutos para leer las instrucciones de uso y mantenimiento. Gracias por elegir Conair, el no. 1 en aparatos de cuidado personal.

MEDIDAS DE SEGURIDAD IMPORTANTES

Siempre que use aparatos eléctricos, especialmente en la presencia de niños, debe tomar precauciones básicas de seguridad, entre las cuales las siguientes:

LEA TODAS LAS INSTRUCCIONES ANTES DE USARLO

MANTÉNGALO ALEJADO DEL AGUA

PARA USO DOMÉSTICO SOLAMENTE

PELIGRO – Cualquier aparato enchufado permanece bajo tensión, aunque esté apagado.
Para reducir el riesgo de muerte o herida por descarga:

1. Si usa el aparato en un cuarto de baño, desconéctelo después de usarlo. El usar el aparato cerca de una fuente de agua puede ser peligroso, incluso cuando está apagado.
2. No sumerja el aparato en agua u otro líquido.
3. No lo use en el baño o la ducha.
4. No colgue ni guarde el aparato donde pueda caer o ser empujado a una bañera o un lavabo.
5. Desconecte el aparato después de cada uso y antes de limpiarlo.

ADVERTENCIA – Para reducir el riesgo de quemaduras, electrocución, incendio o heridas:

1. Este aparato no debería ser usado por, sobre o cerca de niños o personas con ciertas discapacidades.
2. Utilice este aparato únicamente con el propósito para el cual fue diseñado y solamente según las instrucciones. Solo use accesorios recomendados por el fabricante.
3. Solamente use el adaptador provisto para operar o cargar la unidad.
4. **No utilice este aparato si el cable o la enchufe están dañados, si no funciona debidamente, si ha sido dañado, o después de que se hubiese caído. Regrese el aparato a un centro de servicio autorizado para su revisión y reparación.**
5. Mantenga el cable alejado de superficies calientes.
6. Nunca deje caer ni inserte ningún objeto en ninguna de las aberturas. Mantenga el aparato alejado de agua.
7. No utilice si aparato si el cuerpo del mismo o el cable estuviesen dañados.
8. Nunca deje el aparato desatendido mientras esté conectado o encendido.
9. No deje el aparato conectado a una toma de corriente durante más de 24 horas.
10. Desconecte el aparato inmediatamente en caso de problema técnico.
11. Para evitar dañar el cable, no lo enrolle alrededor del aparato. No lo doble ni lo tuerce para guardarlo.
12. Siempre conecte el cable al aparato antes de conectarlo a la toma de corriente. Siempre apague el aparato (OFF) antes de desconectarlo.

Voltaje: este aparato cuenta con un adaptador compatible con corriente alterna de 100–240V C.A.

INSTRUCCIONES DE USO

Lea las instrucciones cuidadosamente antes de utilizar el adaptador de clase 2.

Modelo: E2
Potencia nominal de entrada: 100–240 V C.A., 50/60 Hz, 0.2 Amp. max
Potencia nominal de salida: 3.6V C.C., 1000 mA

FUNCIONAMIENTO

1. Para uso en lugares secos únicamente. No lo exponga al agua.
2. Desenchufe el aparato cuando no lo esté usando o cargando.
3. El adaptador se volverá ligeramente caliente durante el uso. Esto es normal.

PRECAUCIÓN

1. Para uso en lugares secos únicamente. No lo exponga al agua o a la lluvia.
2. No cortocircuite el cable. Siempre conecte el cable al aparato antes de enchufar el adaptador en la toma de corriente.
3. No utilice el aparato si el cuerpo del mismo o el cable estuviesen dañados.
4. Siempre desconecte el adaptador después de usar o cargar el aparato, y antes de limpiarlo.
5. Nunca enchufe el cable en una toma de corriente que no sea del voltaje adecuado.

Este artefacto cumple con la Sección 15 de la Normativa FCC. Su funcionamiento está sujeto a las dos condiciones siguientes: (1) Este artefacto no puede causar ninguna interferencia perjudicial, y (2) Este artefacto debe aceptar cualquier interferencia recibida, incluso alguna interferencia que pudiera ocasionar una operación no deseada.

Advertencia: Se advierte que las modificaciones no aprobadas expresamente por la autoridad competente en materia de conformidad podrían rescindir el permiso del usuario para operar el equipo.

GUARDE ESTAS INSTRUCCIONES

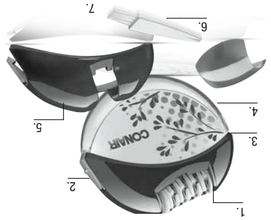

1. Cabezal de depilación de tamaño regular
2. Dos ajustes de velocidad
3. Botones de liberación del cabezal
4. Luz de carga
5. Cabezal para áreas sensibles
6. Cepillo de limpieza
7. Adaptador sector

INSTRUCCIONES DE OPERACIÓN

INSTRUCCIONES DE CARGA

1. Cargue el aparato durante 16 horas antes del primer uso. La batería recargable alcanzará su capacidad máxima después de tres ciclos de carga/descarga. Asegúrese de que el aparato esté apagado (OFF).
2. Enchufe el adaptador en una toma de corriente de 100–240V C.A.
3. Conecte el cable al aparato.
4. El indicador de carga se encenderá.
5. Para lograr un desempeño óptimo y mantener la capacidad de la batería recargable, cargue el aparato durante 16 horas cada tres meses.

ADVERTENCIA

1. Si su piel es sensible a los productos cosméticos, se irrita fácilmente cuando se afeita o padece de alergia, pruebe el aparato sobre una pequeña sección del brazo o de la pierna antes de usarlo.
2. **El cabezal de depilación es un adimento delicado. No lo apriete mucho contra la piel. Un cabezal de depilación deformado o deformado impedirá el buen funcionamiento del aparato y puede provocar heridas. Reemplace el cabezal de depilación inmediatamente si está dañado.**
3. Limpie en agua tibia o fría únicamente. No utilice agua caliente, agua salina o limpiadores. Esto puede dañar los sellos de impermeabilidad del aparato.
4. No sumerja el aparato en agua durante un tiempo prolongado.
5. Si usa desodorante, lave bien y deje secar el cabezal de depilación al aire después de cada uso. Si no lo hace, se puede oxidar.
6. Manténgalo fuera del alcance de los niños.

La depiladora corporal Satiny Smooth™ de Conair extrae el vello de raíz, proporcionando resultados duraderos. Cuenta con dos cabezales interchangeables especialmente diseñados para trabajar rápidamente y lograr un acabado nítido.

1. Asegúrese de que el aparato esté completamente cargado o enchufado. La depiladora puede usarse con o sin cable.
2. **Cerciórese que su piel está limpia, seca y libre de cremas, lociones o aceites.**
3. Elija la velocidad deseada. Utilice la velocidad baja para depilar las zonas sensibles y la velocidad alta para depilar las piernas y los brazos.
4. Estire la piel con una mano para regular los vellos.
5. Coloque el aparato contra la piel, con el cabezal a un ángulo de 90°.
6. **Mueva el aparato regular y lentamente en dirección contraria al crecimiento del vello.** Si quedan vellos, use pequeños movimientos circulares para eliminarlos.
7. Repita el proceso hasta haber eliminado todos los vellos.
8. Despues de terminar, apague el aparato y desconecte el adaptador.

DEPILACIÓN

NOTA: Usar una depiladora puede causar rojez o irritación de la piel. Eso es una reacción normal que desaparecerá rápidamente. Si la irritación persiste durante varios días, busque atención médica.

CABEZAL PARA ÁREAS SENSIBLES

Para depilar las zonas sensibles, retire el cabezal de depilación de tamaño regular e instale el cabezal para áreas sensibles, según se describe a continuación.

1. Asegúrese de que el aparato esté apagado.
2. Presione el botón de liberación del cabezal que se encuentra en el costado de la unidad (A).
3. Retire el cabezal de depilación de tamaño regular (B).
4. Instale el cabezal para áreas sensibles sobre la unidad.
5. Presione suavemente para asegurarlo.

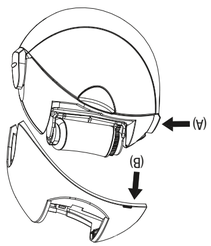

DEPILACIÓN DE PIERNAS/BRAZOS

1. Comience la depilación en la parte inferior de la pierna o del brazo y mueva el aparato, con el cabezal de depilación de tamaño regular puesto, hacia arriba.

2. Para lograr resultados óptimos afeite de la rodilla o del codo, mantenga la pierna o el brazo recto para estirar la piel.
3. Utilice el cabezal de depilación de tamaño regular (B).
4. Instale el cabezal para áreas sensibles sobre la unidad (A).
5. Presione suavemente para asegurarlo.

DEPILACIÓN DE AXILAS/INGLES

NOTA: Las axilas y las ingles son particularmente sensibles. Está sensibilidad va disminuyendo con el tiempo.

1. Para obtener resultados óptimos, utilice el cabezal para áreas sensibles y

2. Para máxima comodidad, utilice la velocidad baja.
3. Estire bien la piel. Alce el brazo para estirar la piel de las axilas. Mueva la depiladora primero hacia arriba, y luego hacia abajo.

4. Para depilar las ingles, estire cuidadosamente la piel y mueva la depiladora desde fuera hasta dentro.

Cord/Cordless

Satiny Smooth™ Total Body

Ultra-Precise Epilator

CONAIR®

For your safety and continued enjoyment of this product, always read the instruction booklet carefully before using.

Instruction Guide
Model E2

Please register this product at www.conair.com/registration

Service Center
Conair Corporation
Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307

©2013 Conair Corporation

150 Milford Road, East Windsor, NJ 08520
7475 North Glen Harbor Blvd., Glendale, AZ 85307

13PG139319 IB-12001

LIMITED TWO-YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed on back, together with your purchase receipt and $5.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-366-0937 for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

WARNING:
IF YOU THINK THE POWER IS OFF WHEN THE SWITCH IS OFF, YOU'RE WRONG.

KEEP AWAY FROM WATER



Everyone knows that electricity and water are a dangerous combination. But did you know that an electrical appliance is still electrically alive even if the switch is off? If the plug is in the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES

MODEL E2
BATTERY REMOVAL

1. Remove the decoration plate from the unit. Using a small Phillips head screwdriver, open the units top and bottom housings.
2. Remove the top housing by hand.
3. The battery should now be exposed so you can separate the wire connectors. Carefully hold the wires on each side of the connector and gently cut the wires.

The connector will separate and the battery can be removed from the inner housing. Bring the battery to the nearest collection center for disposal or call the toll-free RBRC information line at 1-800-8-BATTERY. RBRC is a trademark of the Rechargeable Battery Recycling Corporation. DO NOT throw the battery into the normal municipal waste system.

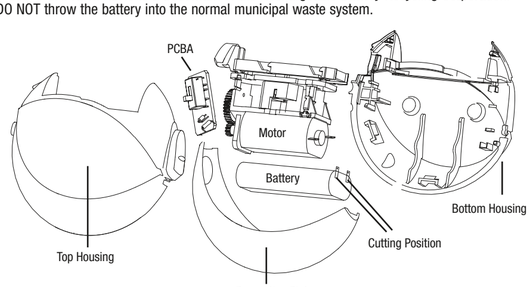

CLEANING

1. Check to make sure the epilator is in the OFF position and the adapter is removed from the outlet.
2. Press the epilation attachment release button, removing the attachment.
3. After the attachment is removed, press the epilation release button once again, gently pulling the epilation head out of the unit.
4. Once the epilation head is removed from the unit, submerge ONLY the head under water to clean it.
5. Dry completely before replacing the head back onto the unit.
6. To remove additional debris from the epilation head, gently wipe with alcohol. Using a cotton swab, place a small amount of alcohol on the swab and gently dab the epilation head until debris is removed.

NOTE: The body of the epilator is NOT to be washed.

STORAGE

When not in use, your epilator should be disconnected, allowed to cool and stored in a safe, dry location, out of reach of children. Any other servicing should be performed by an authorized service representative. This appliance has no user-serviceable parts. This product is for household use.

CONTAINS NICKEL METAL HYDRIDE BATTERY. MUST BE COLLECTED, RECYCLED OR DISPOSED OF PROPERLY. DO NOT DISPOSE OF IN THE MUNICIPAL WASTE.

RECYCLE RBRC NI-MH 1.800.822.8837

COSMETIC/FACIAL EPILATION

NOTE: Facial epilation is for upper lip and chin ONLY.

1. For optimum results, attach the sensitive-area attachment.
2. To ensure comfort, set the unit to the low speed.
3. Hold the skin taut.

TIPS FOR BEST RESULTS

1. For first-time epilator users, we recommend epilating the skin in the evening to allow time for redness to disappear.
2. To prepare skin for epilation, we recommend taking a warm bath or shower to clean the skin. Ensure that it is completely dry before using the epilator.
3. Following epilation, it is recommended that moisture creams be applied to relax the skin.
4. Hair removal of any kind may result in ingrown hairs. We recommend regular exfoliation of skin to prevent ingrown hairs.
5. To avoid infection, we recommended regular cleaning of the epilation head.

IMPORTANT

Do not use on open sores, burns, warts, beauty spots, sunburned skin or varicose veins. Do not use if you have a skin irritation or infection, like psoriasis or eczema, on your legs. Do not use for shaving or removing hair from your face (with the exception of upper lip and chin), head, chest, eyebrows, eyelashes, or genitals. The Satiny Smooth™ Total Body Epilator is intended exclusively for use on legs, arms, underarms, and bikini line.

MAINTENANCE

NOTE: For long-lasting performance, we recommend you regularly disinfect the epilation head and attachments.

DEPILACIÓN DEL ROSTRO

NOTA: Depile SOLAMENTE el bigote y la barbilla.

1. Para resultados óptimos, utilice el cabezal para áreas sensibles.
2. Para máxima comodidad, utilice la velocidad baja.
3. Estire bien la piel.

CONSEJOS PARA RESULTADOS ÓPTIMOS

1. Si es la primera vez que se depila con una depiladora, le aconsejamos que se depile de noche, para permitir que la rojez desaparezca durante la noche.
2. Le aconsejamos que tome un baño o una ducha caliente antes de depilarse para limpiar la piel. Cerciórese que su piel está completamente seca antes de depilarse.
3. Use crema/loción hidratante después de la depilación para relajar la piel.
4. Extraer los vellos, con cualquier método, puede causar vellos encarnados. Le recomendamos que exfolie su piel regularmente para evitar los vellos encarnados.
5. Para evitar las infecciones, le aconsejamos que limpie el cabezal de depilación regularmente.

IMPORTANTE

No utilice el aparato sobre heridas abiertas, quemaduras, verrugas, lunares, piel quemada por el sol o venas varicosas. No lo use si tiene una infección/irritación de la piel, como la psoriasis o el eczema. No utilice el aparato para depilar el rostro (excepto el bigote y la barbilla), la cabeza, el pecho, las cejas, las pestañas o las áreas genitales. La depiladora corporal Satiny Smooth™ ha sido diseñada para usarse exclusivamente en las piernas, los brazos, las axilas y las ingles.

INSTRUCCIONES DE MANTENIMIENTO

NOTA: Para asegurar un rendimiento duradero, le recomendamos que desinfecte los cabezales de depilación regularmente.

LIMPIEZA

1. Asegúrese de que el aparato esté apagado y desconectado.
2. Presione el botón de liberación del cabezal y retire el cabezal de depilación.
3. Tras retirar el cabezal, presione el botón de liberación otra vez y jale suavemente el sistema de depilación.
4. Tras retirar el sistema de depilación, sumerja ÉSTE (y SOLAMENTE ésta) en agua para limpiarlo.
5. Permita que sague completamente antes de volver a armar el aparato.
6. Para eliminar los residuos, limpie suavemente el cabezal con alcohol, usando un bastoncillo empapado en alcohol y restregando suavemente el cabezal hasta haber eliminado todos los residuos.

NOTA: NO lave el cuerpo de la depiladora.

ALMACENAJE

Después de usar el aparato, desconéctelo, permita que entre y guárdelo en un lugar seco y seguro, fuera del alcance de los niños. Cualquier otro servicio debe ser realizado por un técnico autorizado. Este aparato no contiene partes que puedan ser reparadas por el usuario. Para uso doméstico solamente.

ESTE APARATO CONTIENE UNA BATERÍA DE NÍQUEL E HIDRURO METÁLICO (NiMH), LA CUAL DEBE RECICLARSE SEGÚN LAS LEYES VIGENTES AL FINAL DE SU VIDA ÚTIL. NO TIRE LA BATERÍA CON EL RESTO DE LA BASURA.

RECYCLE RBRC NI-MH 1.800.822.8837

REMOCIÓN DE LA BATERÍA

1. Retire la placa decorativa del aparato. Separe la parte superior y la parte inferior del cuerpo con un pequeño destornillador cruciforme.
2. Abra el cuerpo del aparato, alzando la parte superior.
3. Ahora, la batería está descubierta, lo que permite separar los conectores que juntan los alambres. Agarre los alambres por ambos lados del conector y córtelos con cuidado.

Los conectores se separarán, lo que permitirá remover la batería. Lleve la batería al centro de reciclaje más cercano o llame a la línea de información de la RBRC al 1-800-8-BATTERY para más información. RBRC es una marca registrada de la organización Rechargeable Battery Recycling Corporation.

NO tire las baterías con el resto de la basura.

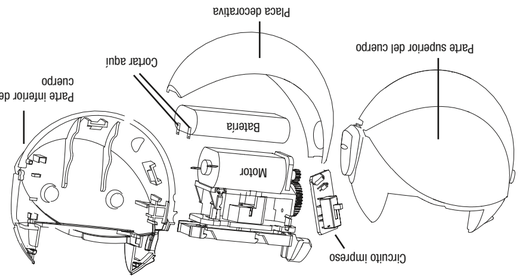

ADVERTENCIA:
SI CREE QUE NO HAY CORRIENTE CUANDO EL APARATO ESTÁ APAGADO, ESTÁ EQUIVOCADO

MANTÉNGALO ALEJADO DEL AGUA



Todos sabemos que no se debe mezclar la electricidad y el agua. Pero ¿Sabe usted que un aparato eléctrico permanece bajo tensión aunque esté apagado? Si está conectado, hay corriente. Por lo tanto, siempre desenchufe los aparatos eléctricos después de usarlos.

SIEMPRE DESENCHUFE LOS APARATOS PEQUEÑOS

GARANTÍA LIMITADA DE DOS AÑOS

Conair reparará o reemplazará (a su opción) su aparato sin cargo por un período de 24 meses a partir de la fecha de compra si presentara defectos de materiales o fabricación.

Para obtener servicio técnico bajo esta garantía, regrese su aparato al Centro de Servicio indicado al dorso, junto con su recibo de compra y un cheque o giro postal de US$5.00 por gastos de manejo y envío. Los residentes de California solo necesitan dar una prueba de compra y deben llamar al 1-800-366-0937 para recibir instrucciones de envío. En ausencia del recibo de compra, el período de garantía será de 24 meses a partir de la fecha de fabricación.

CUALQUIER GARANTÍ, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO PERO NO LIMITADAS A LA GARANTÍA IMPLÍCITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPÓSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 24 MESES DE LA PRESENTE GARANTÍA ESCRITA. Algunos Estados no permiten limitaciones sobre la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.

CONAIR NO SERÁ RESPONSABLE, EN NINGÚN CASO, POR NINGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLÍCITA. Algunos Estados no permiten la exclusión o limitación de daños especiales, incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted.

Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.

Para registrar su producto, visítenos en:
www.conair.com/registration

Centro de servicio
Conair Corporation
Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307

©2013 Conair Corporation

150 Milford Road, East Windsor, NJ 08520
7475 North Glen Harbor Blvd., Glendale, AZ 85307

13PG139319 IB-12001

Instrucciones
Modelo E2

Para su seguridad y para disfrute plenamente de este producto, siempre lea las instrucciones cuidadosamente antes de usarlo.

CONAIR®

Funcionamiento con/sin cable

Depiladora corporal ultraprecisa

Satiny Smooth™